



GlassQuote.ca

GLASSQUOTE WINDOW MEASURING GUIDE

WINDOW MEASURING GUIDE

A simple homeowner guide to measuring common window styles before requesting an online estimate.

Presented by GlassQuote.ca



WINDOW MEASURING GUIDE
GLASSQUOTE.CA

01 / 08



WINDOW MEASURING GUIDE

HOW TO MEASURE ANY WINDOW

Measure width and height in three spots, record the smallest number, and use rough opening examples only for online estimating.


1 Measure width at top, middle and bottom

2 Measure height at left, centre and right

3 Record the smallest width and height

4 Photos help confirm style and condition

i Online estimates are approximate. Final sizing is confirmed before production or installation.

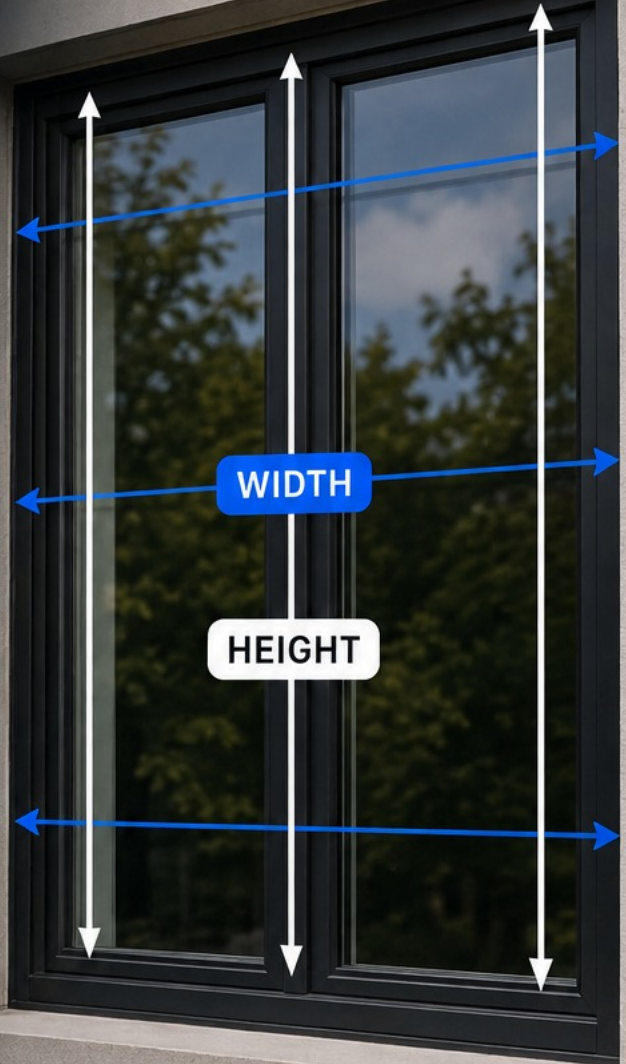




WINDOW MEASURING GUIDE

SLIDING WINDOW MEASURING

For single sliding and double sliding windows, measure the full visible opening width and full frame height.

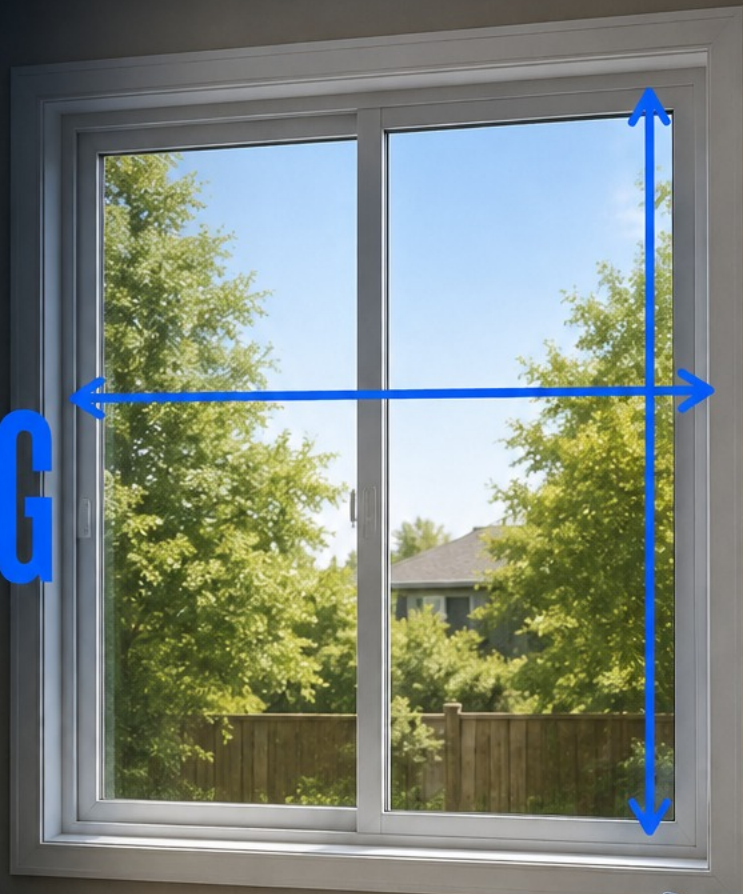

Measure overall width across the full frame



Measure height from sill to top frame



Note if one sash moves or both sashes move



Best for estimate: send one straight-on photo of the full window.





WINDOW MEASURING GUIDE

SINGLE-HUNG WINDOW MEASURING

Measure the full frame width and height, and note that the lower sash is typically the operable section.



Measure width at top, middle and bottom



Measure height at left, centre and right



Confirm if only the bottom sash opens



Include a photo if the frame or sill appears damaged.





WINDOW MEASURING GUIDE

DOUBLE-HUNG WINDOW MEASURING

Measure the full frame size and note that both upper and lower sashes may operate.



Record the smallest frame width




Record the smallest frame height



Note if both sashes open or tilt



Helpful photo:
capture the full window and interior trim.

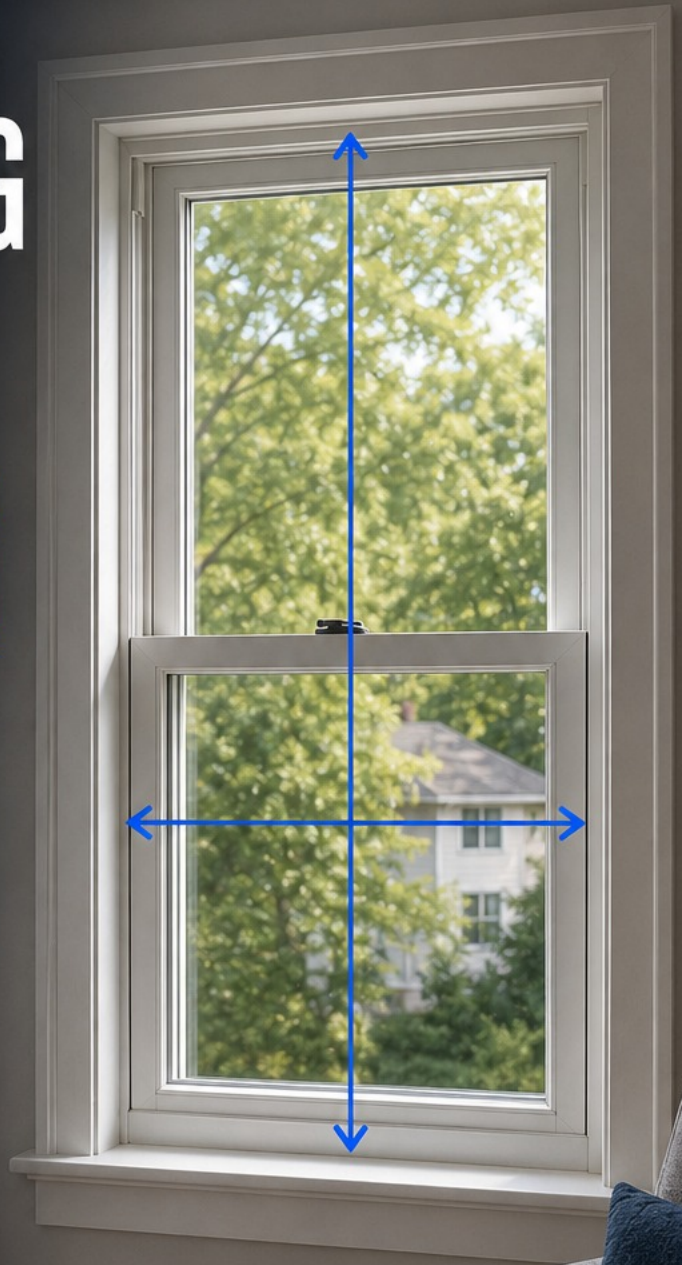



WINDOW MEASURING GUIDE

CASEMENT WINDOW MEASURING

Measure the full outer frame width and height, and note the hinge side and crank operation.



Measure full frame width



Measure full frame height



Note left-hinged or right-hinged



Check if the crank still works



A straight-on exterior or interior photo helps confirm style.





WINDOW MEASURING GUIDE

AWNING WINDOW MEASURING



Awning windows are hinged at the top. Measure the full frame width and height and note the crank or operator condition.



Measure overall frame width



Measure overall frame height



Confirm top-hinged awning style



Send a photo if the operator, screen or sash condition matters.





GlassQuote.ca

WINDOW MEASURING GUIDE

FIXED & PICTURE WINDOW MEASURING

For fixed or picture windows, measure the full visible frame size and note if the unit is part of a larger combination assembly.



Measure overall frame width



Measure overall frame height



Note if it connects to opening side windows



Mention if the glass is tempered or unusually large



Need an exact quote?

Send measurements + photos to GlassQuote.ca.



WINDOW MEASURING GUIDE
GLASSQUOTE.CA

08 / 08



GlassQuote.ca

GLASS MEASURING GUIDE

GLASS MEASURING GUIDE

Measuring glass for an online estimate means measuring the visible glass width and height only, not the whole frame, and noting whether the glass looks single, double, tempered, frosted, or patterned.



Measure visible glass width



Measure visible glass height




Note if glass is double-pane, tempered, frosted or patterned



Photos help confirm glass type and thickness



Helpful photo: include the full glass area and any corner stamp or glass marking.

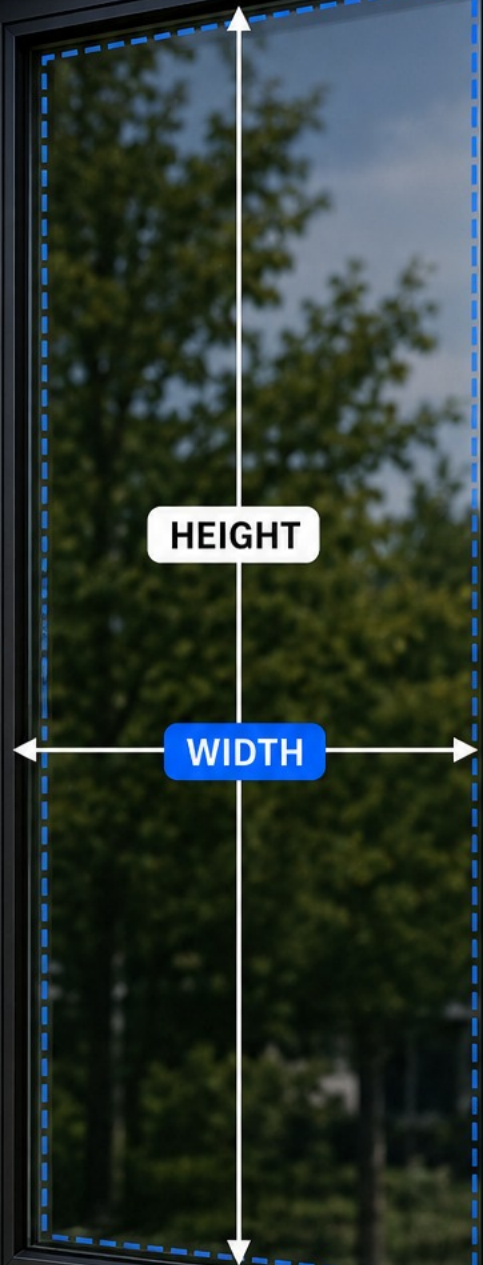

GLASS MEASURING GUIDE
GLASSQUOTE.CA